INSTRUCTIONS FOR USE

$\frac{N E \sum T I M E}{INSTRUCTION MANUAL}$





PLACE ONE AAA BATTERY



INSERT DC PLUG IN PROJECTOR






TURN TO SHARPEN PROJECTION




TURN LEFT AND RIGHT
TO ADJUST PROJECTION ANGLE

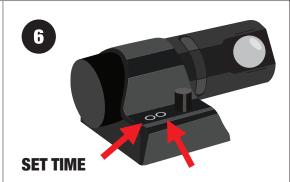


Push the button and the minute hand will move forward by one minute, hold the button and the minute hand will move forward rapidly.

CHANGE THE DIAL

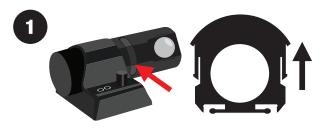


PULL OUT THE DIAL CONTAINER TO REPLACE THE DIAL

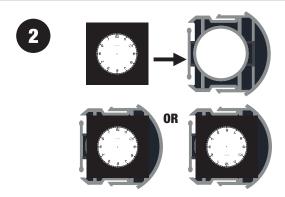

NOTE: Depending on the projection angle, the need to change the image orientation.

CHANGE SCREENS

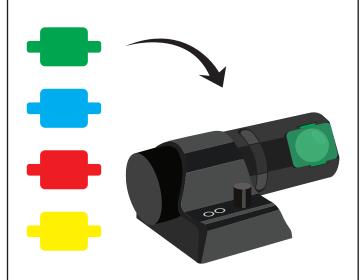

INSTALL THE COLOR SCREEN,
TO CHANGE THE PROJECTION EFFECT