



NEXT TIME

THANK YOU
FOR BUYING OUR
NEXT TIME

**ALARM
CLOCK**

MANUAL
ITEM NUMBER

5201

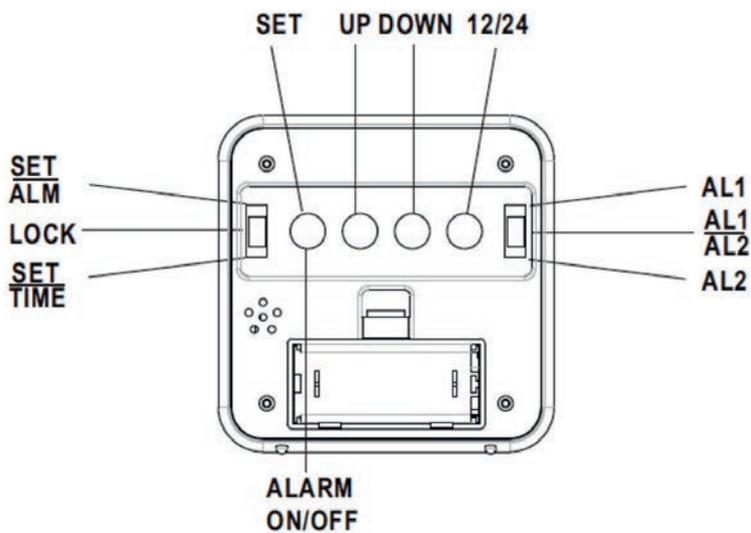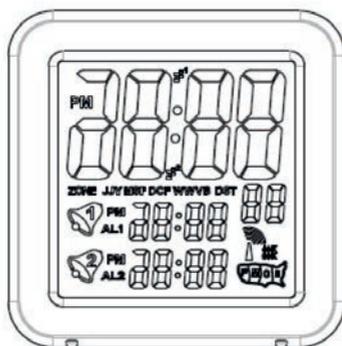

BATTERY

This alarm clock is working on:
2 x 1.5V(AAA)

- Different types of batteries or new and used batteries cannot be mixed.
- Batteries must be inserted with the correct polarity.
- Please remove exhausted batteries from the product.
- Batteries shall be disposed of in a safe way. Only dispose batteries in specific collection containers (contact your retailer for more information) in order to protect the environment.

WARNING: Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

FUNCTIONS

1. Radio control (DCF, MSF, WWVB, JJY)
2. 12/24Hr time display
3. Two alarms
4. Touch snooze
5. Adjustable snooze time
6. LED backlight (around 5 second)

**RADIO
CONTROL
FUNCTION**

The Radio Control (RC) function will automatically start and receive RC signal after you put battery into battery compartment.

Please note that it will only work in the time zones:

- JJY – Japan
- WWVB – North America
- DCF – Most parts of Europe
- MSF – United Kingdom

The clock automatically receives the RC signal daily to check the current time, one time a day. If the RC signal is scanned, the clock will stop to receive the signal until the next day. It will capture the signal according to the following schedule:

- JJY: AM 12:02, AM 1:02, AM 2:02, AM 3:02
- WWVB(MSF): AM 2:02, AM 3:02, AM 4:02, AM 5:02
- DCF SUMMER: AM 3:02, AM 4:02, AM 5:02, AM 6:02
- DCF WINTER: AM 2:02, AM 3:02, AM 4:02, AM 5:02

If you want to receive the RC signal manually, hold down the “UP” button for 2 seconds. A signal symbol will flash at the bottom right corner of the screen. When the signal is found, the symbol will stop flashing and will show permanent.

If you want to stop receiving the RC signal manually, press the “UP” button again. The signal symbol will disappear and not show anymore at the corner of the screen.

If you want to change channel of the RC signal, hold down “DOWN” button for 2 seconds to change channel.

You can see the selected channel in the middle of the screen.

JJY – MSF – DCF - WWVB

If you live in a zone where the signal cannot be found, the clock will work normal by setting the time manually.

Please see the next page for the instructions how to do this.

DST ON/OFF

The Daylight Saving Time (DSF) is automatically switched on/off by the clock. That means you don't have to set your clock manually when the time changes.

1. DST is on, the Symbol of DST is visible on the display behind the RC signal. The time will be added 1hr automatically for WWVB/JJY and the time of DCF/MSF will stay the same. When the winter time is scanned, DST will be off.
2. DST is off, the Symbol of DST is not visible on the display when the summer time is scanned. The time is decreased 1hr for DCF/MSF channel and the time of WWVB/JJY will stay the same.

TIME SETTING

If there is no RC signal provided in your country/area, you can set the time manually as below procedure.

1. Push the switch at the left side to "SET TIME" (down), and then press SET button to set the time zone.
2. Press Up/Down button to adjust value.
3. Press SET button second time to set hour
4. Press Up/Down button to adjust value
5. Press SET button third time to set minute.
6. Press Up/Down button to adjust value
7. Press SET button again to exit setting.
8. Push the switch to "LOCK" for changing mode to normal working.

When you live in a country/area where the clock should have signal, but the clock is unable to receive a good signal, it can happen that the signal is disturbed by other signals. For example dect phones or microwaves.

Another possibility is that the signal cannot reach the clock because it is blocked by parts of the building.

For example a steel construction, or when the clock is inside a basement.

The signal is best received when the clock is close to a window.

**TIME DISPLAY
12/24**

There is a possibility to show the time in a 12hr view, or a 24hr view.

With a 12hr view, the clock will show the hours from 01-12 and PM in front of it, if nothing is shown, than it is AM.

With a 24hr view, the clock will show the hours from 00-23.

1. Push the switch to "LOCK" (this is the standard/middle position of the switch at the left side), and then press "12/24" button to change the time display.

**SNOOZE/
LIGHT**

The clock has a special white LED backlight.

The light will stay on for about 5 seconds, after you touch the top of the clock.

This touch button on top of the clock also functions as a snooze button when the alarm is ringing.

**ALARM TIME
SETTING**

To set the alarm, please follow the steps below:

1. Push the switch on the left side to "SET ALM", and then push switch on the right side to "AL1" to set Alarm 1, "AL1/AL2" to set 2 alarms on the same day, or "AL2" to set Alarm 2.
2. Press SET button first to set the hours
3. Press Up/Down button to adjust time
4. Press SET button second time to set the minutes
5. Press Up/Down button to adjust time
6. Press SET button third time to set snooze time (from 05 to 60 minutes)
7. Press Up/Down button to adjust value
8. Press SET button again to exit setting
9. Push the left switch to "LOCK" for changing the mode of the clock to standard

**ALARM
ON/OFF**

When you want the alarms to wake you up, please follow the steps below:

1. Make sure the left button is set on "LOCK".
2. Push the right switch to one of the three modes (AL1 or AL1/AL2 or AL2).
AL1, you can only select the time you set under AL1.
AL1/AL2, you can select AL1, AL2 separately, or you can select both at the same time AL1+AL2.
AL2, you can select the time you set under AL2.
3. Press SET button to start alarm function. A symbol of a bell is on at left side next to the alarm time.
4. Press SET button again, the alarm function is off (The bell next to the alarm time will disappear).

CAUTION

Battery: 2 x 1.5V(AAA)

See you

N E X T I M E

www.nexttime.eu